


Due to some drivers finalization status in Windows 7, after the MP867 has been plugged into a Windows 7 machine for the first time, user need to manually tweak the device setting to get the installation complete.

Note: for Windows 7, MP867 will **not need** any driver under normal circumstance. The drive that comes with the CD is for standby purpose only.


After plugging in the MP867 for the first time in Windows 7 machine, wait for windows to detect and install driver for the new hardware. After which you will see either message:

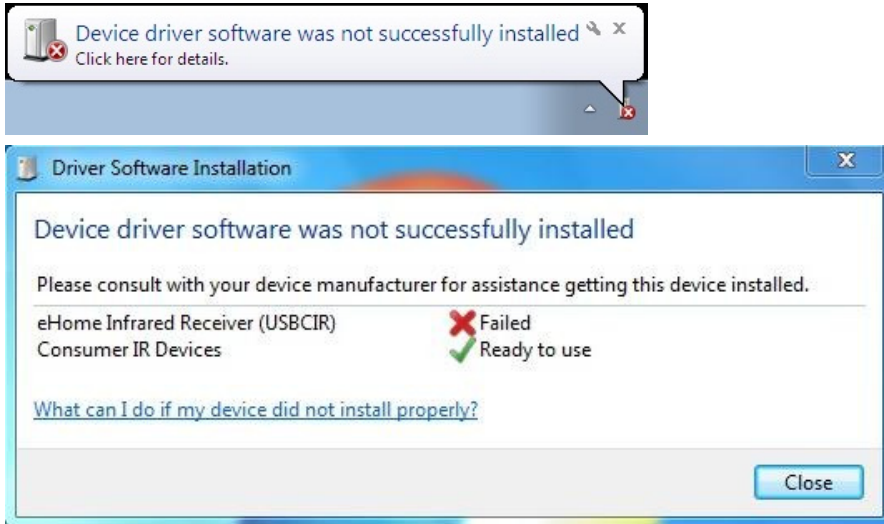


This is normal and follow the steps below to complete the installation, go to

1. Start > Control Panel
2. System and Security
3. Click on "Device Manager" under "System"


> The follow screen will appear:

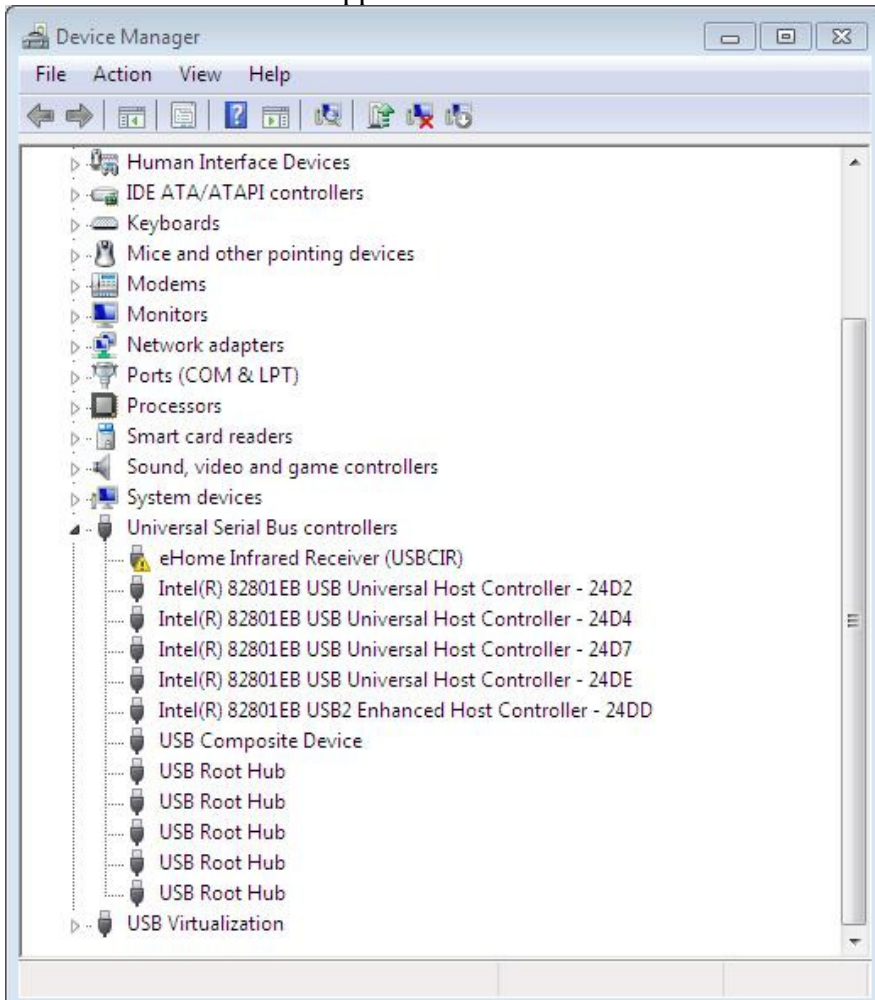


> Right click at the “eHome Infrared Receiver” and select update driver:

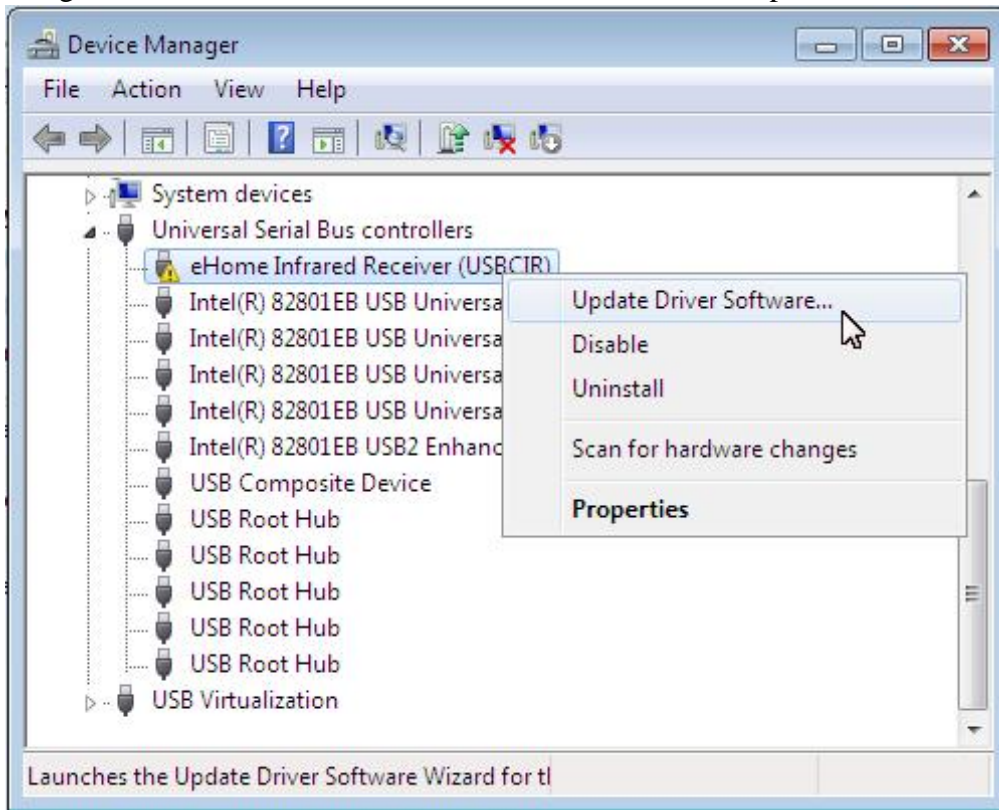


> Next select “Browse my computer for driver software”

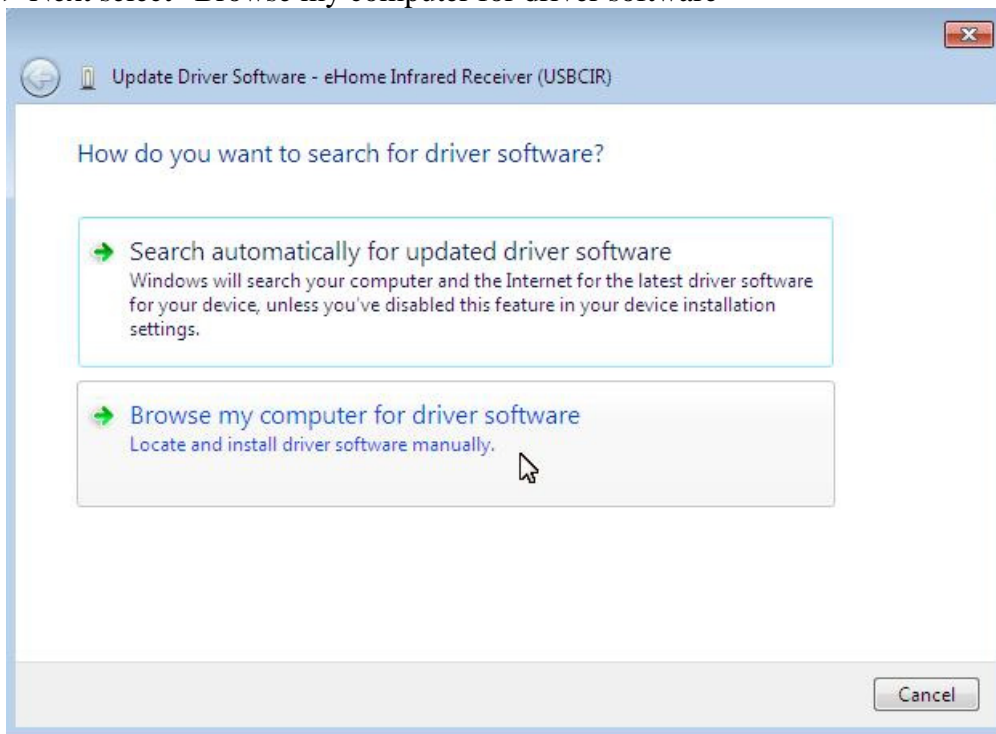


> select “Let me pick from a list of device drivers on my computer”

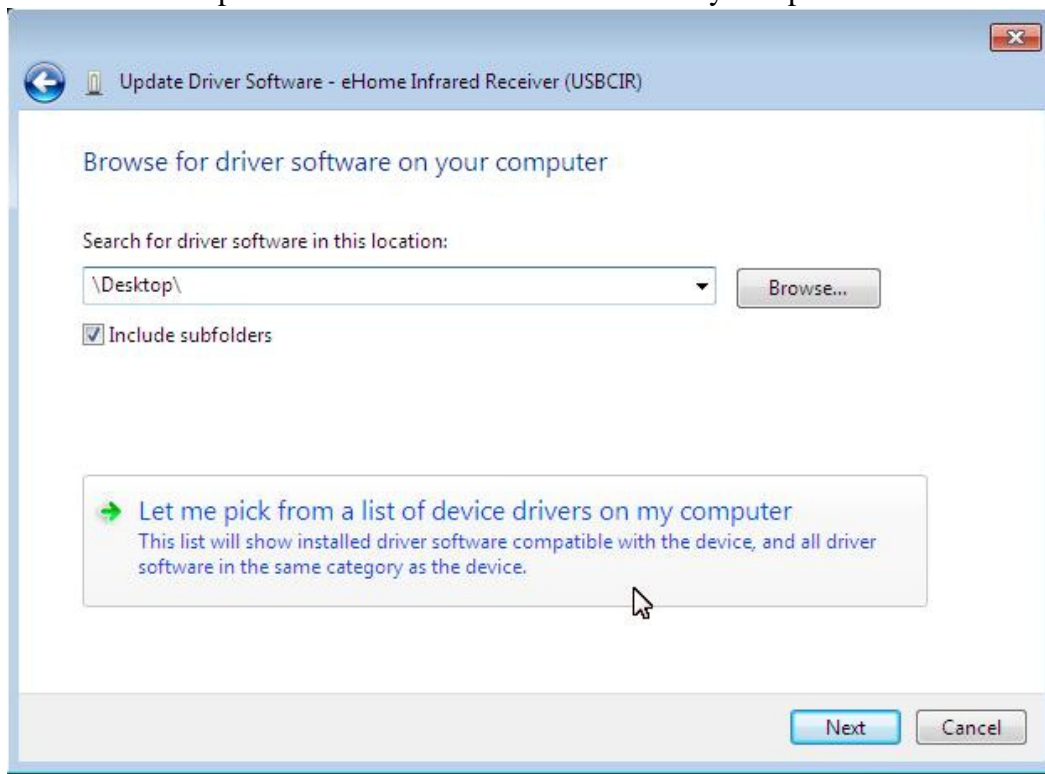


> Select “USB Composite Device”

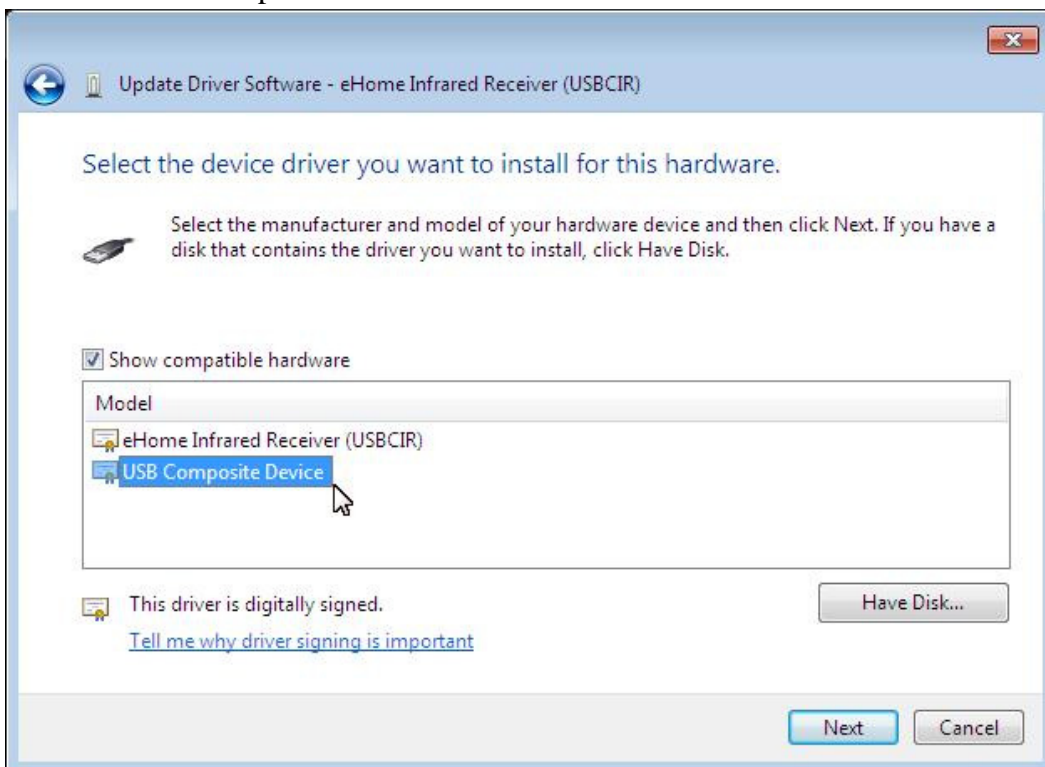

> The system will complete the installation as show below

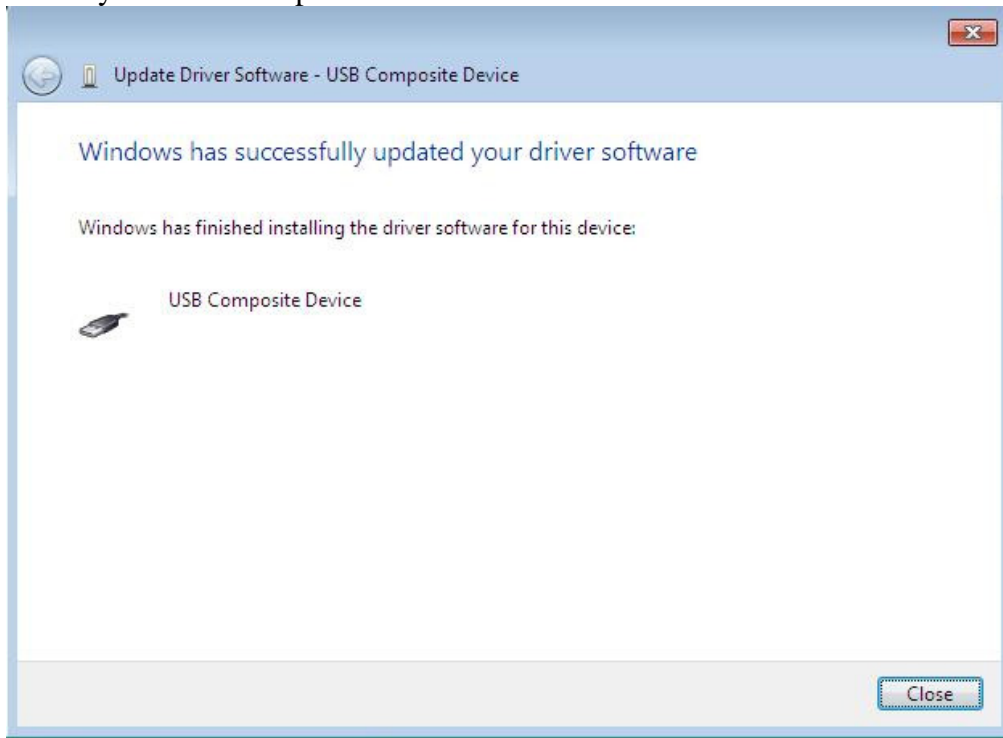

After-which your smartcard(Cashcard) reader and the “eHome Infrared Receiver (USBCIR)” will be listed in your device manager as show below:

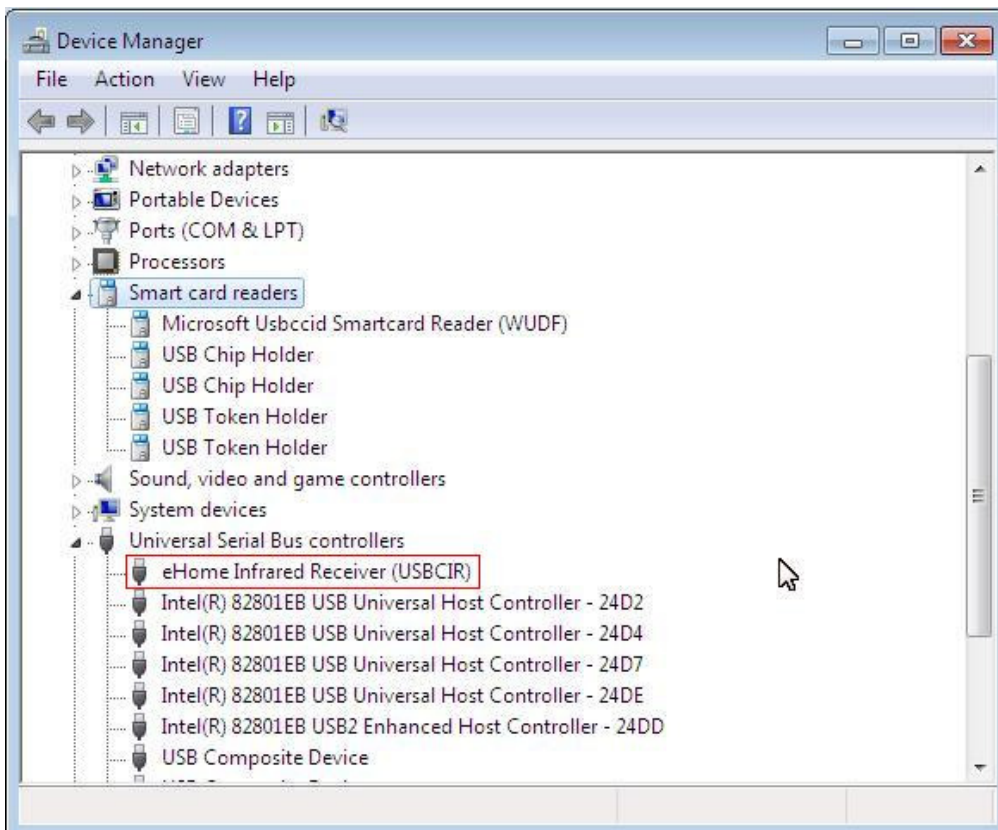

This completes your Windows 7 device drivers and if you need to use cashcard function, please follow the using cashcard with MP867.