

## Using MCKAL MP867-IR (InfraRed) for memory cards on Windows Vista

This guide will guide you through the setup of the necessary drivers on your **Windows Vista** system.

### A What you need

1. MCKAL MP867-IR Direct AIO Cardreader

### B Setting up your PC/Laptop with the drivers

1. Download driver (MP867-IR) from <http://www.mckal.com/download/MP867with-IR.zip> or use the CD provided. *Note: MP867with-IR driver is NOT for MP867 (without IR).*
2. Execute "Autorun" (Autorun.exe) from the downloaded drivers or from the CD.
3. Select "SIM/Smart" driver.
4. Step through the instructions to complete installation.
5. After drivers installation is completed, plug in your MP867-IR into your USB port, wait for the system to auto-detect and complete the device installation.
6. After the device is detected and installation completed, you can read all card formats except SmartCard or Singapore NETS Cashcard.

If you intend to use the MP867-IR cardreader for SmartCard or Singapore NETS Cashcard, please download <http://www.mckal.com/download/MP866-867-901cashcardguidev4.pdf>.

~ END ~

#### Disclaimer

For Java support, please check with your system technical support.  
© MMXI MCKAL, All Rights Reserved.