

Using MCKAL MP866 for *memory cards on Windows Vista*

This guide will guide you through the setup of the necessary drivers on your **Windows Vista** system.

A What you need

1. **MCKAL** MP866 Smart AIO Cardreader

B Setting up your PC/Laptop with the drivers

1. Download driver (MP866) from <http://www.mckal.com/download/MP86X.zip> or use the CD provided.
2. Execute "Autorun" (Autorun.exe) from the downloaded drivers or from the CD.
3. Select "SIM/Smart" driver.
4. Step through the instructions to complete installation.
5. After drivers installation is completed, plug in your MP866 into your USB port, wait for the system to auto-detect and complete the device installation.
6. After the device is detected and installation completed, you can read all card formats except SmartCard or Singapore NETS Cashcard.

If you intend to use the MP866 cardreader for SmartCard or Singapore NETS Cashcard, please follow these instructions <http://www.mckal.com/download/MP866-867-901cashcardguidev4.pdf> .

~ END ~

Disclaimer

For Java support, please check with your system technical support.
© MMXI **MCKAL**, All Rights Reserved.