

MCKAL
Absolute Mobility

USB mobility enhancer

coupe


800/1200/1600 dpi
Laser

Note: Laser is invisible to naked eyes.

Thank you for selecting **MCKAL coupe** high quality rechargeable wireless laser mouse. Please read this instruction guide carefully and thoroughly for effective and long lasting usage of your new mouse.

What you should have:

- A- MCKAL coupe mouse x1
- B- "micro" USB wireless receiver x1
- C- rechargeable AAA/LR03 battery x1
- D- USB cable for charging x1

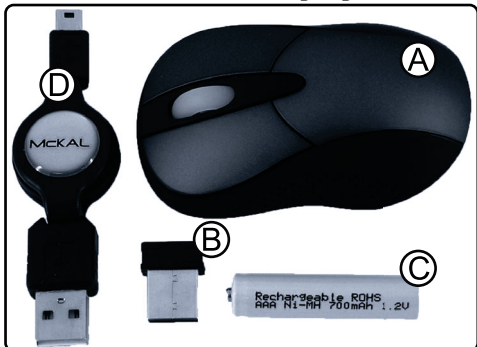

1*
YEAR
warranty

SAVING GEAR
MCKAL
second hand
LESS PACKAGING


Specifications & information is correct at the time of printing, and may subject to change without prior notice. Page 1 of 4

12cm

Knowing your mouse:

- E- resolution (1600/1200/800dpi) selection button
- F- ON/OFF button
- G- laser lens (see caution)
- H- cover release lever
- I- charging cable interface
- J- left button
- K- right button
- L- scroll wheel/centre button
- M- battery indicator (blinking light)
- N- battery/USB receiver cover/case
- O- high quality glide pads

CAUTION
DON'T view the laser DIRECTLY.
CLASS 1 LASER
Note: Laser light is INVISIBLE.
Note for XP/Vista/7:
For best result, unchecked "enhance pointer precision" checkbox in Control Panel-Mouse.
www.mckal.com for more information.

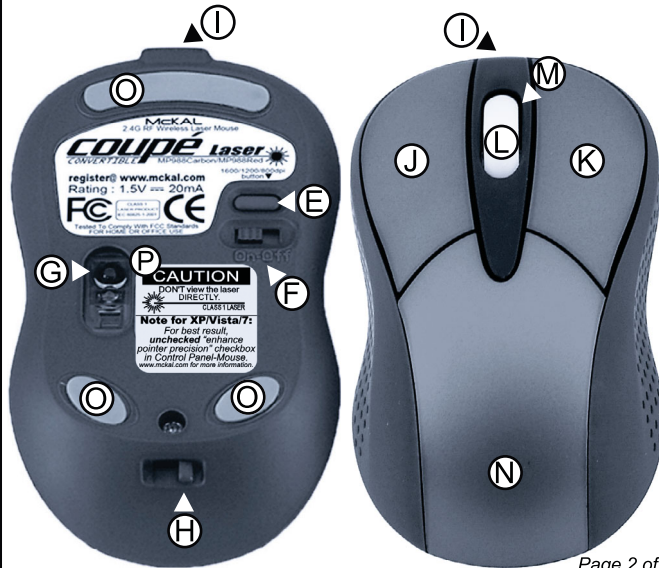

Page 2 of 4


Quick Start:

Page 3 of 4

Remove cover removed by sliding (H) as shown on the right. Next, remove USB receiver from the stow and place the rechargeable battery into the battery slot. Replace the cover.



push lever (H) as shown to release cover

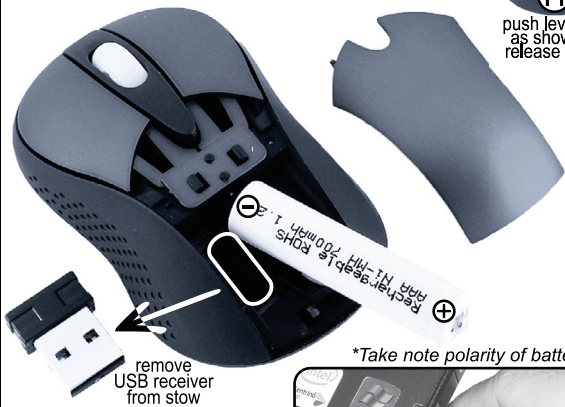

remove USB receiver from stow

*Take note polarity of battery.



Insert the USB receiver into a PC/Notebook USB port and you are ready to use!

Features & functions:

Page 4 of 4

- 2402-2480MHz (5m working distance/unblocked)
- 48 Channel Frequency Hopping (FHSS)
- 1.5V, low 20mA power efficient
- 1x AAA/LR03 battery
- state-of-the-art low-powered laser technology
- 1600/1200/800 dpi selectable
- 8 minute idle auto sleep (any button wake up)
- battery low-power indicator; blinking red light between gap of centre button & mouse(M)(see page 2).

Charging and maintenance of battery:

- switch off mouse with (F) if not using for long a time.
- when battery is flat, connect the charging cable as shown below for charging. Mouse can be used while the battery is charging. **Switch (F) to "On" for charging.**
- charge 16 hours before first use.
- 6-8 hours for full charge.



to USB port of PC or MCKAL MM611/MM711 for charging of battery

Extend retractable cable to use mouse while charging. **USB RECEIVER NEEDS TO BE CONNECTED TO PC FOR MOUSE OPERATION, EVEN WHILE CHARGING.**

Mouse/USB receiver re-sync



MCKAL coupe employs the latest auto-scan 48-channel FHSS technology that does not require sync between USB receiver and mouse in normal usage. In the unlikely event of requiring to re-sync:
(1) Reconnect USB receiver to PC USB port.
(2) Press and hold right button together with centre button(scroll) for 15 seconds.
(3) Release and the mouse is ready to use.

visit www.mckal.com for more MCKAL products.